 
 



#115085 Dressing Chest Instructions



X4

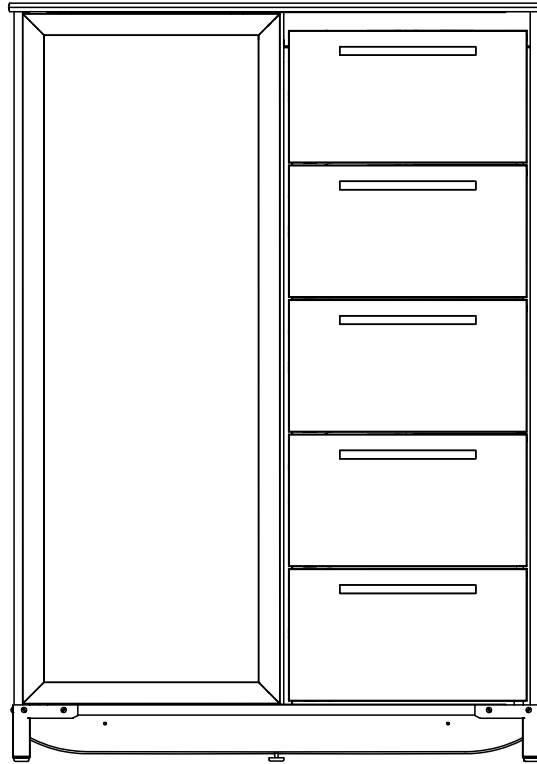

 X4
1/4-20 x 15mm

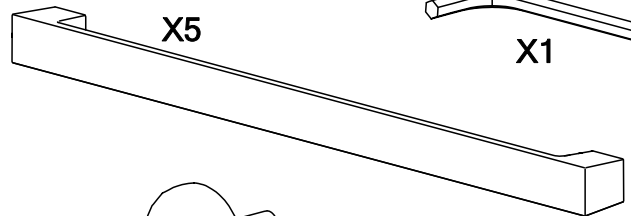

X5



X1



 
X3




X3




X10
#8-32 x 7/8"

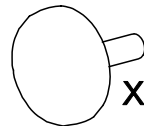

X1

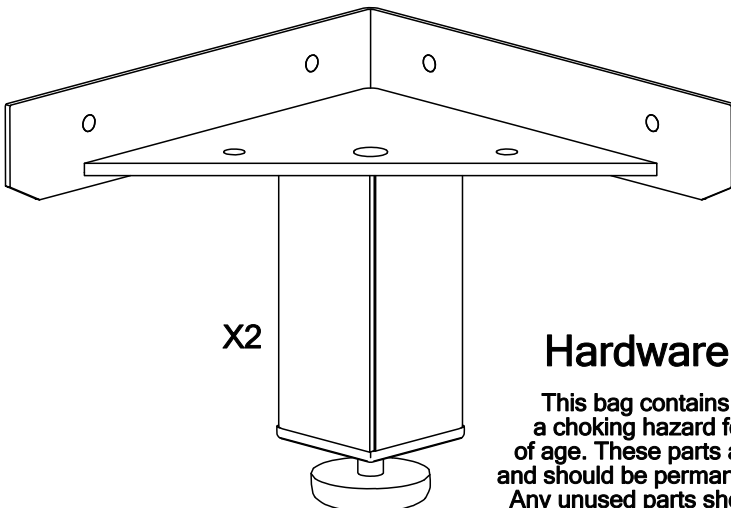 

X2

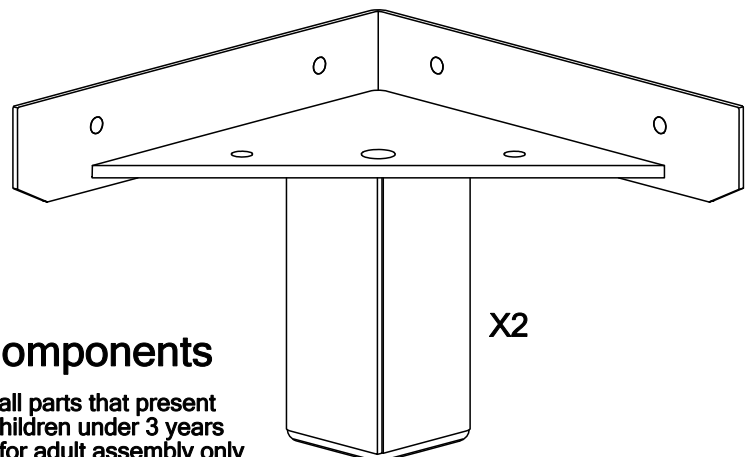 


X2


Hardware Components

This bag contains small parts that present a choking hazard for children under 3 years of age. These parts are for adult assembly only and should be permanently affixed to the furniture. Any unused parts should be discarded properly.

 
Step 1

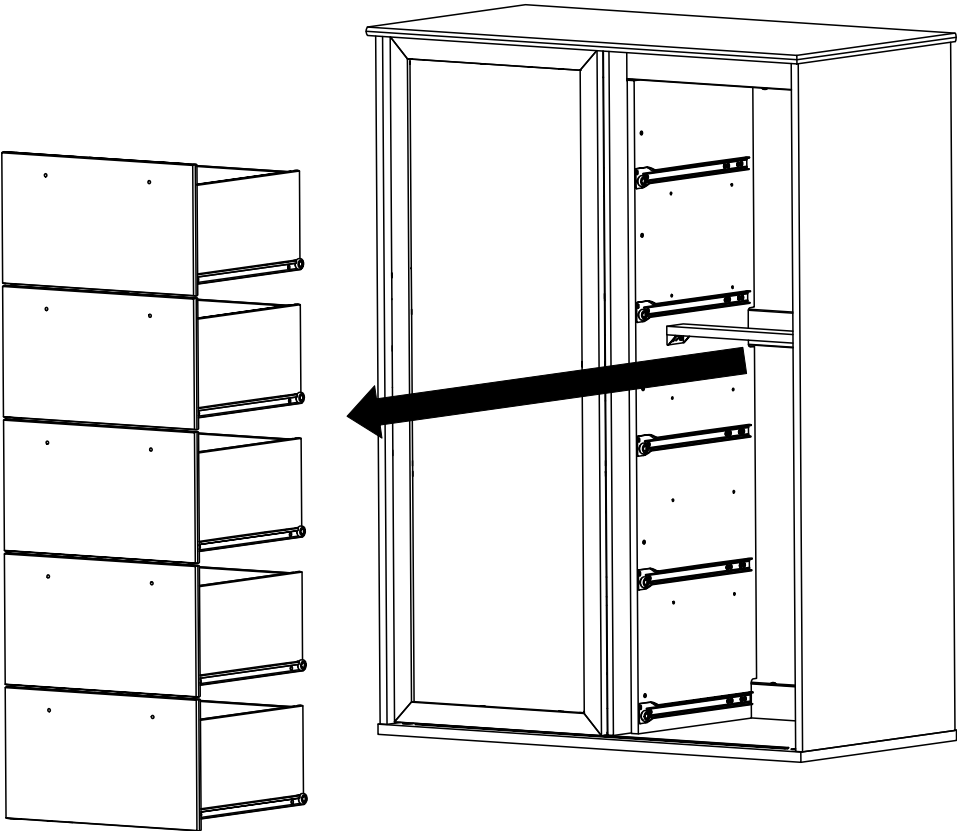

 
Step 2

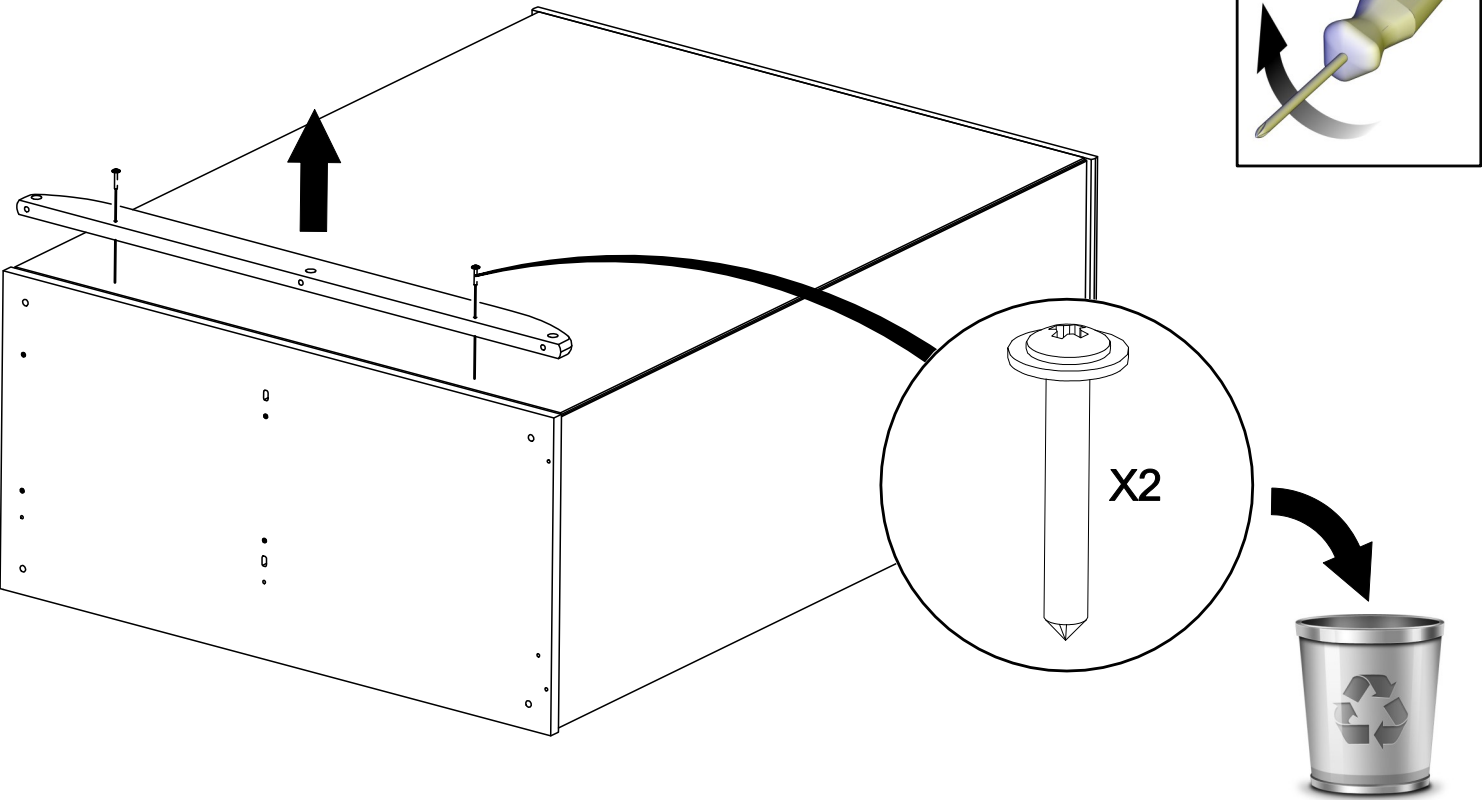

 
Step 3

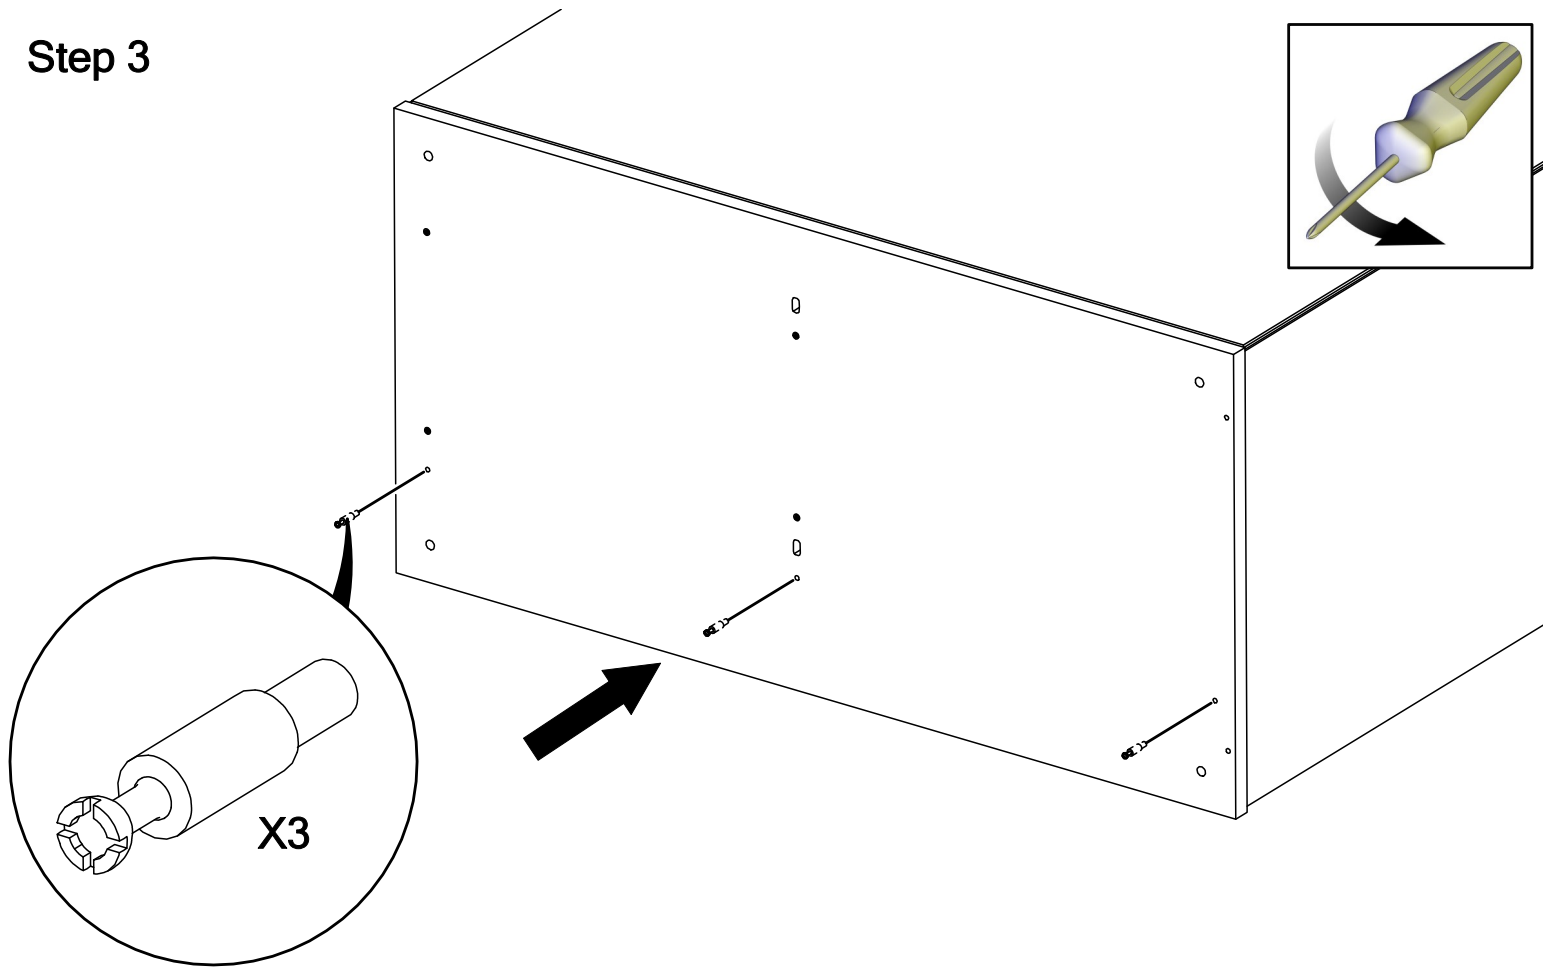

 
Step 4

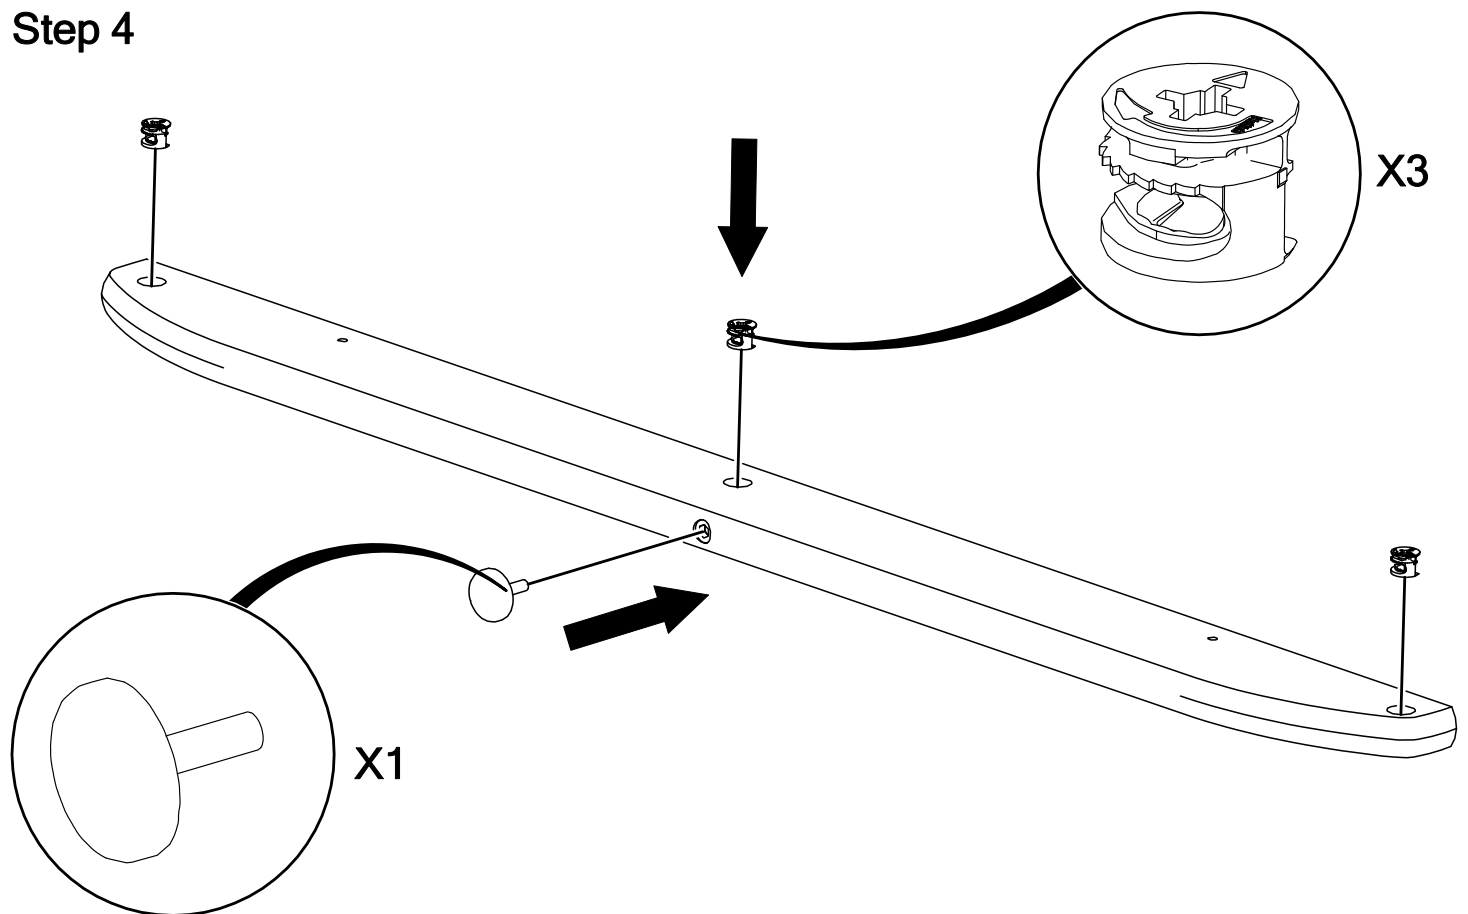

 
Step 5

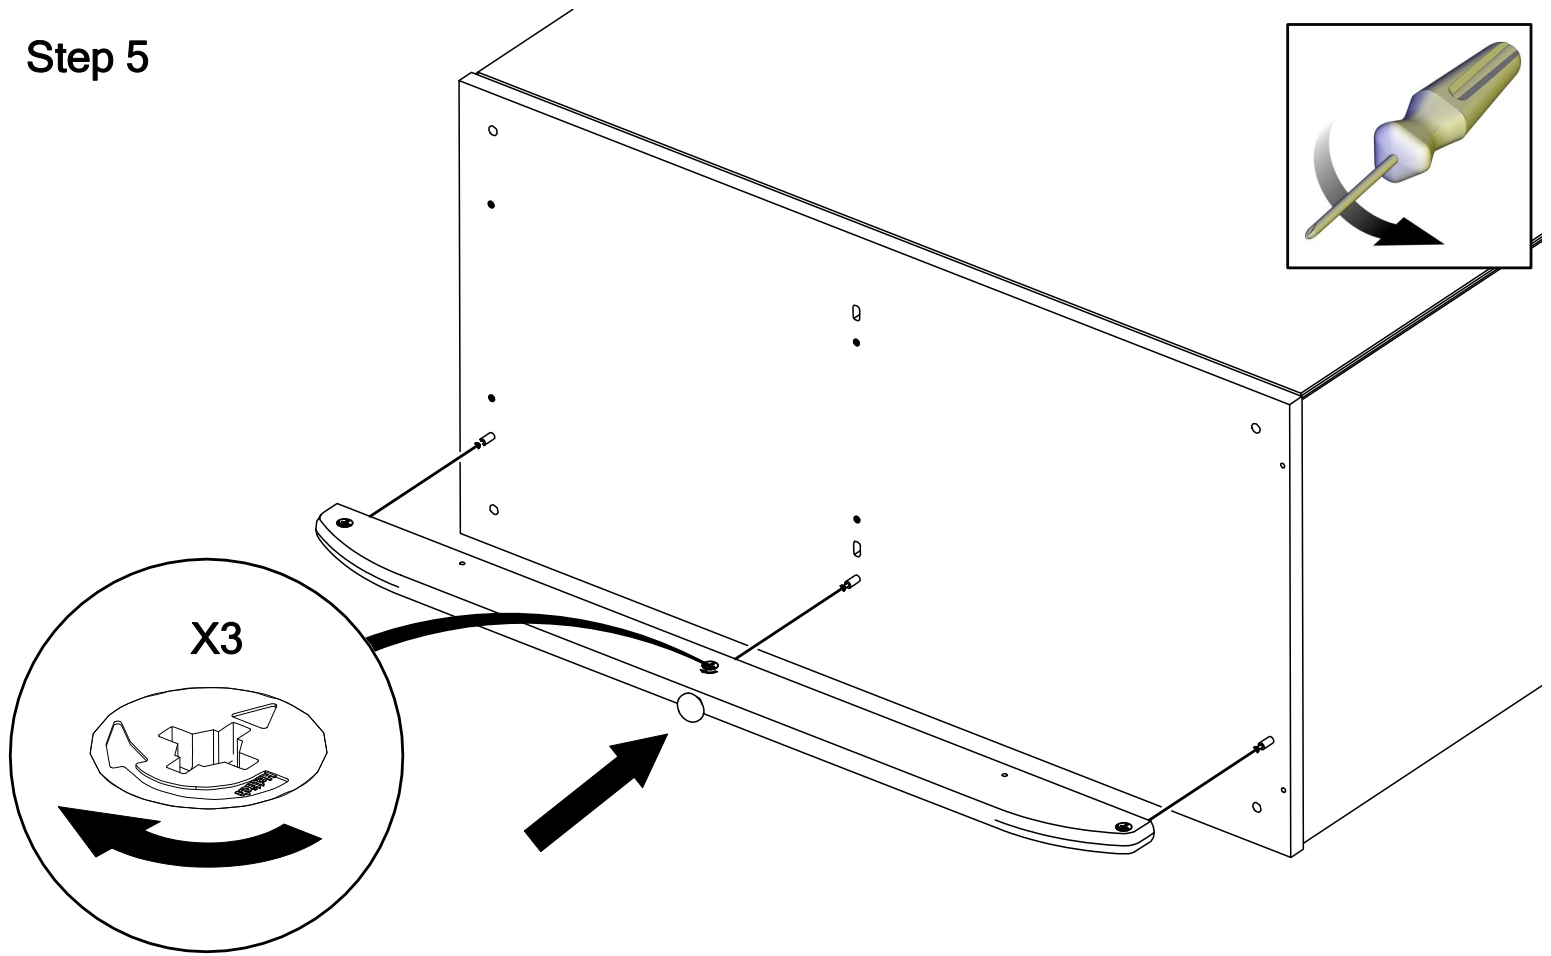

 
Step 6

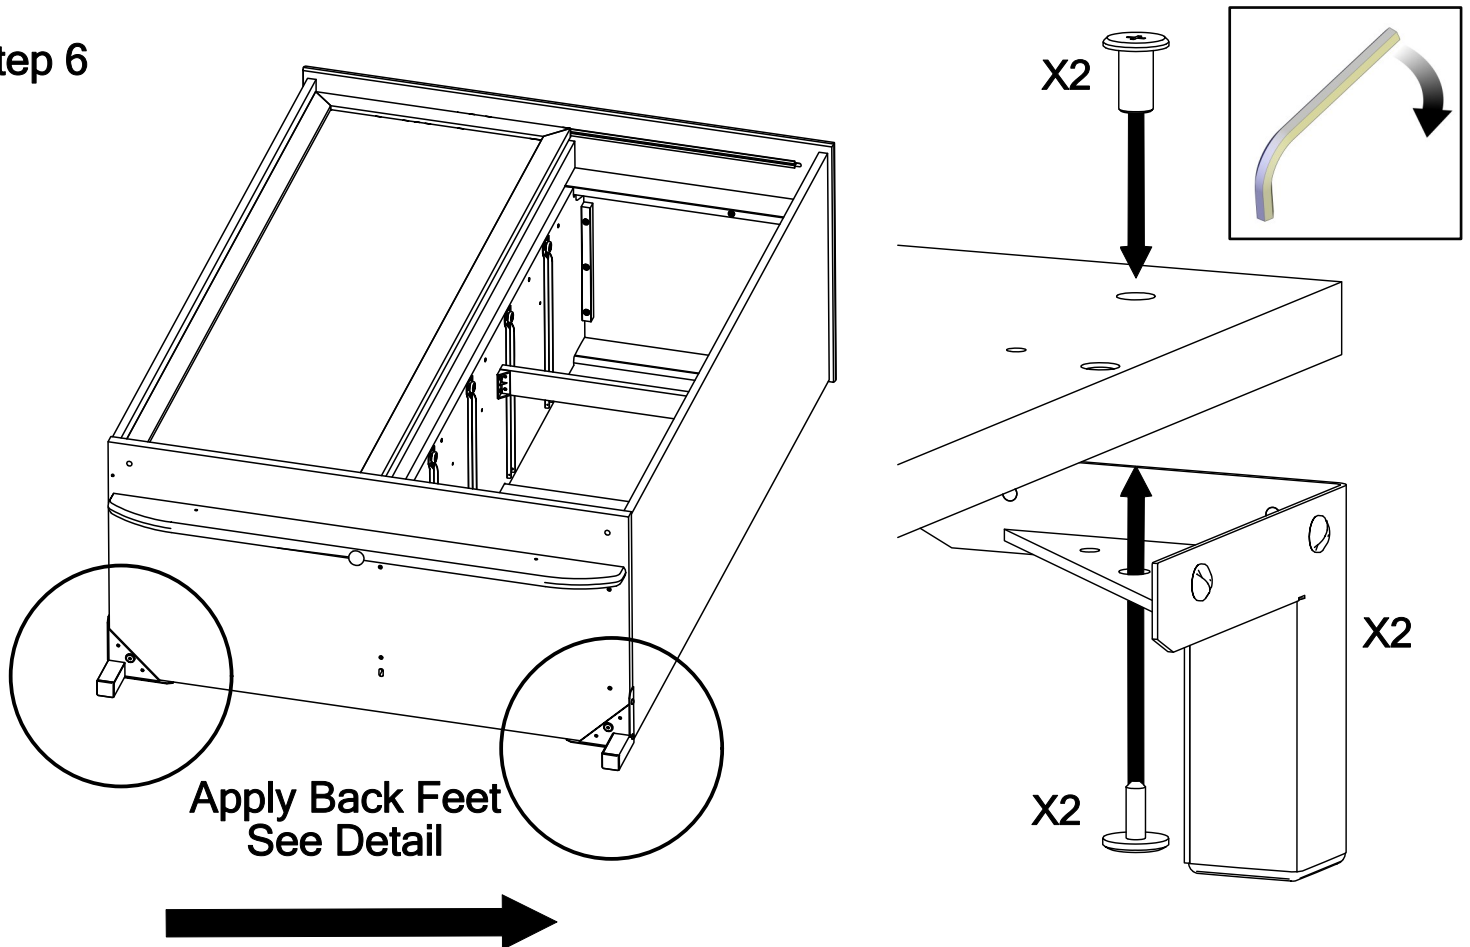

 
Step 7

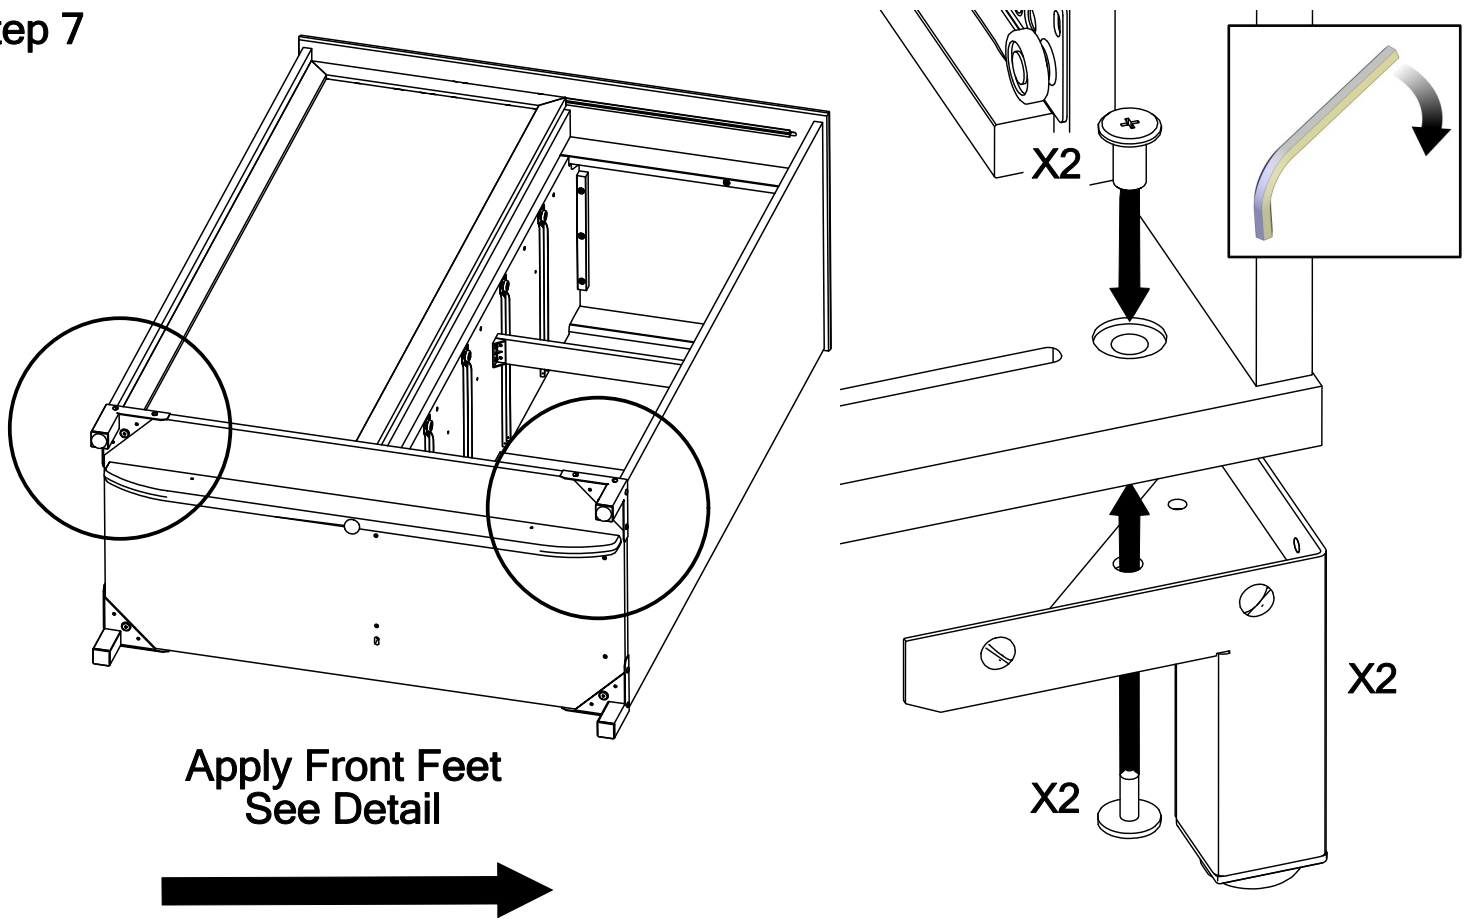


 
Step 8

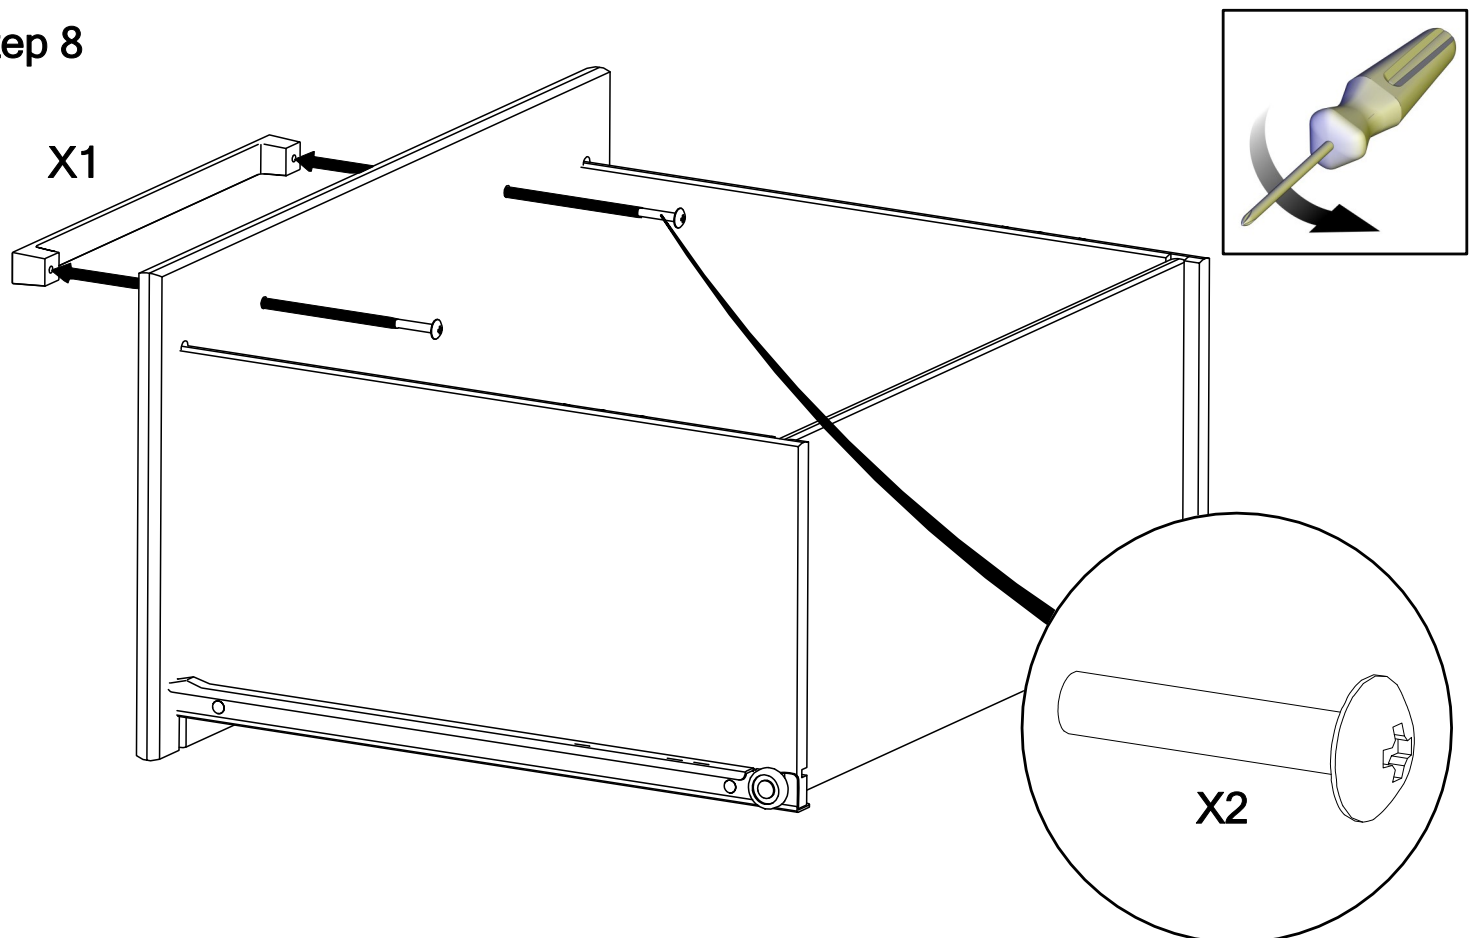

 
Step 9

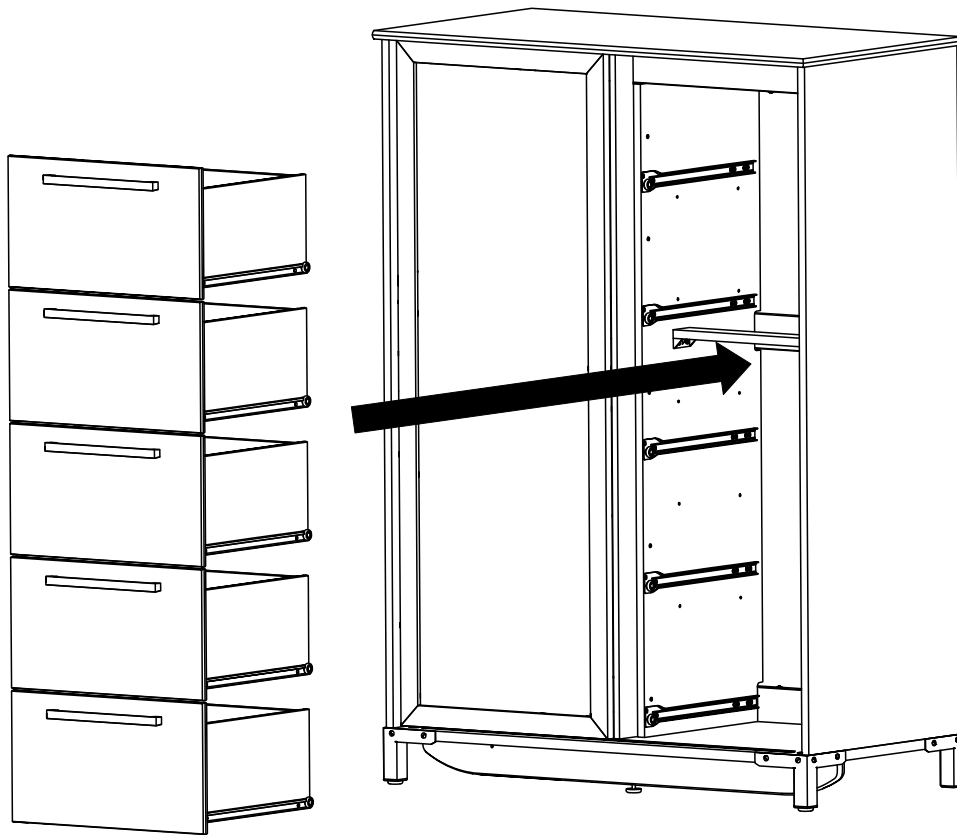

  
Step 10

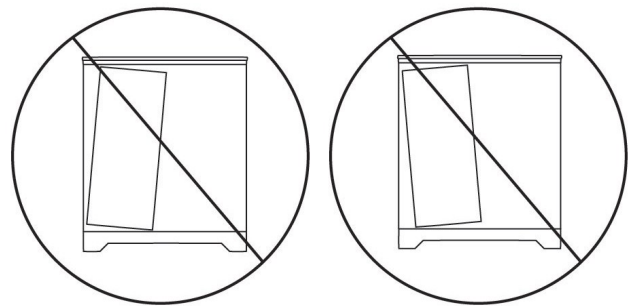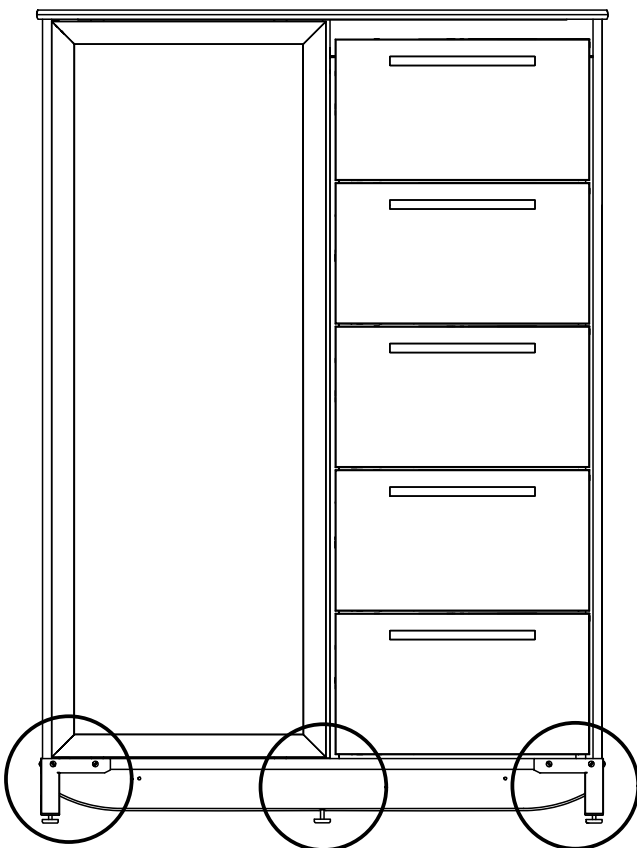

Door Mis-Aligned (Incorrect)

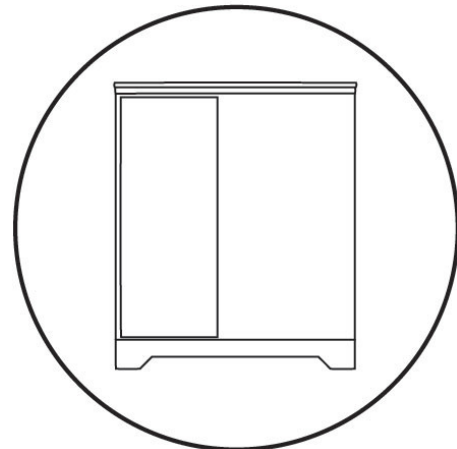 

Door Aligned (Correct)

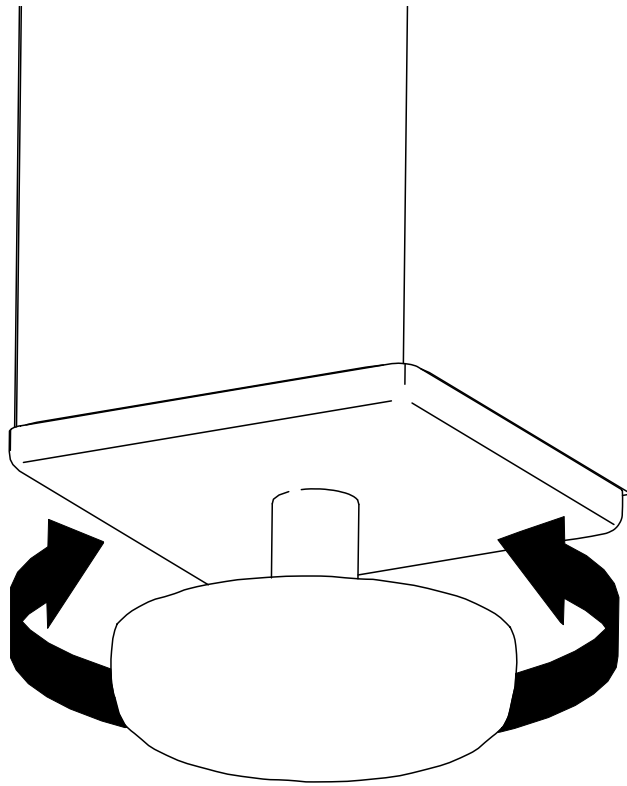 

Adjust levelers until door is aligned
